

Basler Components



Interfacing Basler GigE Vision Cameras with Stemmer Imaging Common Vision Blox (CVB) 9.0.2 Software

APPLICATION NOTES

Document Number: AW000715

Version: 03 Language: 000 (English)

Release Date: 15 January 2009

BASLER 

Contacting Basler Support Worldwide

Europe:

Basler AG
An der Strusbek 60 - 62
22926 Ahrensburg
Germany
Tel.: +49-4102-463-500
Fax.: +49-4102-463-599
bc.support.europe@baslerweb.com

Americas:

Basler, Inc.
855 Springdale Drive, Suite 160
Exton, PA 19341
U.S.A.
Tel.: +1-877-934-8472
Fax.: +1-610-280-7608
bc.support.usa@baslerweb.com

Asia:

Basler Asia Pte. Ltd
8 Boon Lay Way
03 - 03 Tradehub 21
Singapore 609964
Tel.: +65-6425-0472
Fax.: +65-6425-0473
bc.support.asia@baslerweb.com

www.baslerweb.com

**Copyright 2009 Basler Vision Technologies.
All material in this publication is subject to change without notice.**

1 Introduction

This document explains how to interface a Basler GigE Vision camera with Stemmer Imaging Common Vision Blox (CVB) 9.0.2 software using a standard Gigabit Ethernet network adapter card.

2 Steps


Step 1: Hardware requirements

In addition to the Basler camera and its power supply, you will need an Ethernet cable (Cat 6 or higher) and your PC must be equipped with a Gigabit Ethernet network adapter card (also called a Network Interface Controller or NIC).

We strongly recommend using a network adapter from the Intel Pro 1000 family or an adapter with a comparable chipset.

Step 2: Software Installation Tips

During installation of the CVB software package, it is important that you enable the installation of the "Stemmer Imaging GigE Filter Driver VIN for all GenICam compliant cameras (siFilterIP GigE Vision Filter Driver)" as shown below:

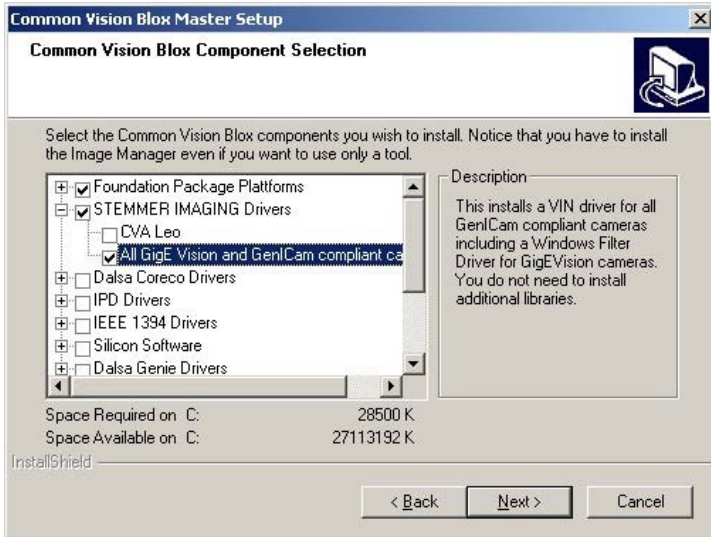


During the driver installation process you may get messages like the one shown below. Please continue the installation process by clicking the **Continue Anyway** button:



Step 3: Configuring the network adapter


Open a **Network Connections** window, right click on the name of the network adapter you want to configure, and select **Properties** from the drop down menu that appears. You'll see a **Properties** window as shown below.

Make sure that **siFilterIP GigE Vision Filter Driver** appears in the item list and that it is checked as shown:

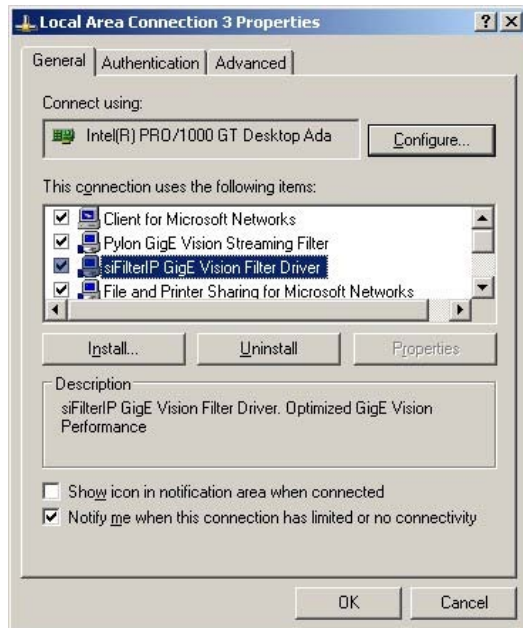


By default, Basler GigE Vision cameras are configured to obtain an IP address automatically (i.e., not for a static IP address). We recommend that you also configure the network adapter to obtain an IP address automatically. To do this, open a **Network Connections** window, right click on the name of your network adapter, and select **Properties** from the drop down menu that appears.


Select **Internet Protocol (TCP/IP)** from the item list (you may need to scroll down to see it) and click the **Properties** button:

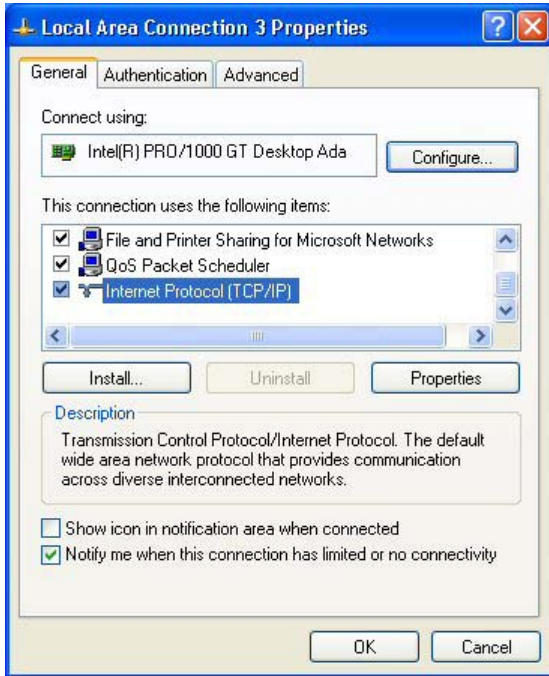


Select **Obtain an IP address automatically** as shown below and click the **OK** button to confirm:

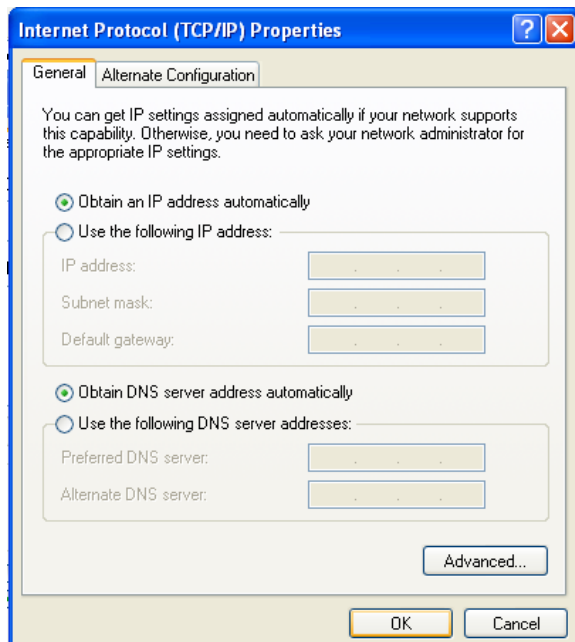


Click on the **Configure** button and a properties window for the adapter will open as shown below. Select the **Advanced** tab:

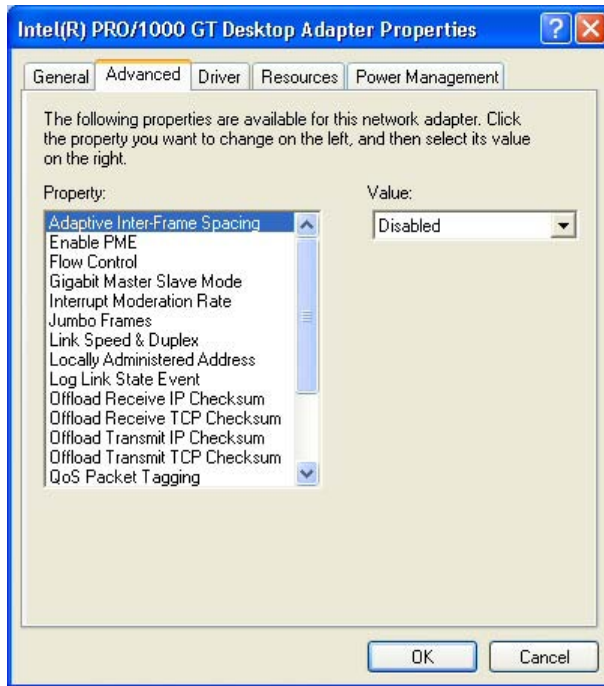


Find the parameter that sets the adapter's speed and duplex mode and set it for auto detection:

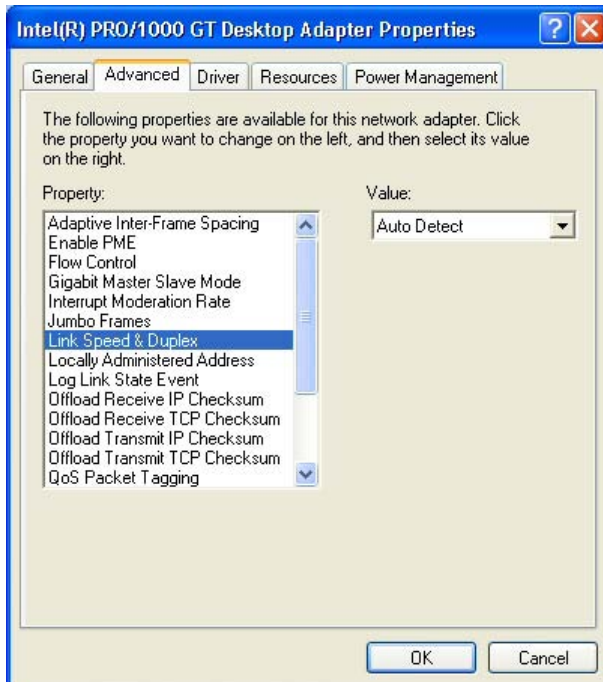


Find the parameter that determines the maximum size of an IP packet (typically called "Jumbo Frames") and set it to the value closest to 9 kB (we don't recommend using the 16 kB maximum because many network adapter cards do not function properly at that setting):

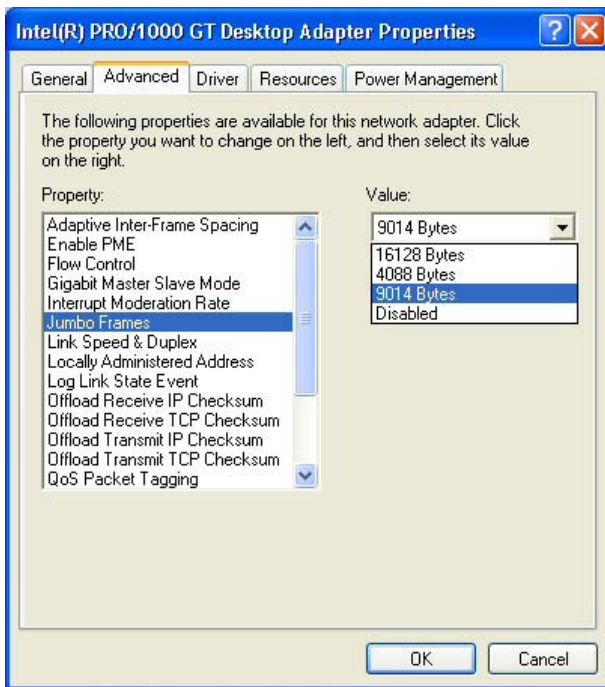

Find the parameter that sets the receive descriptors and set it to the maximum:

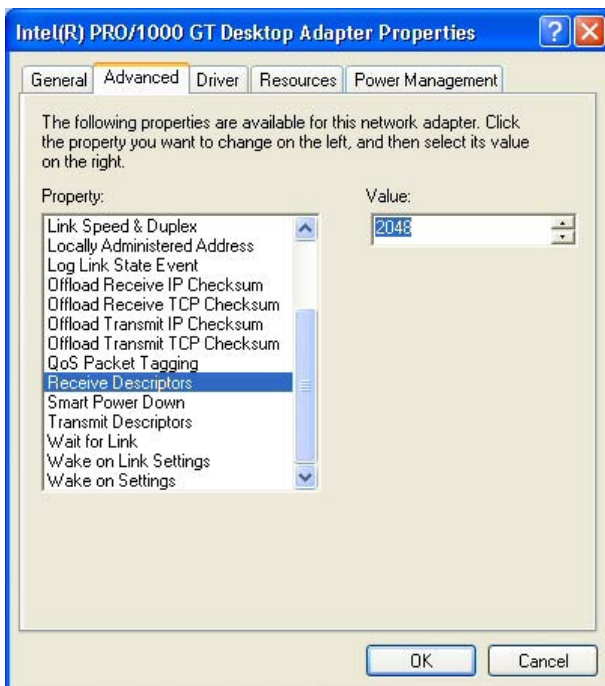

Configure the adapter so that it generates fewer CPU interrupts. With the Intel Pro 1000 adapter, for example, you would set the **Interrupt Moderation Rate** to Extreme instead of Adaptive:

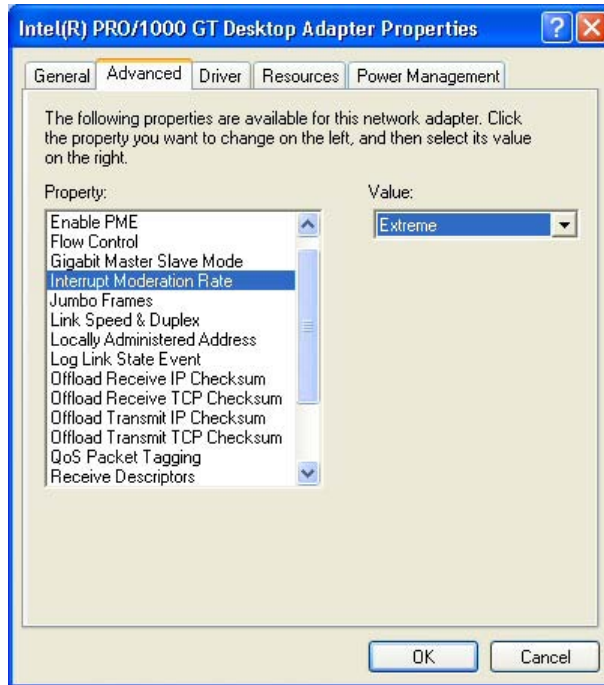

Click the **OK** button to save the changes you made.

Step 4: Setting the camera's IP configuration

In step three, the Basler camera and the network adapter card were set so that they would each obtain an IP address automatically. This is the default configuration, and it will work well if your camera does not need to be configured for a static (persistent) IP address. If you so desire, your camera can be configured for a static IP address. Remember that if you set the camera for a static IP address, you must also configure the network adapter card for a static address in the same subnet used by the camera.


The Stemmer Imaging GigE Filter Driver and the GigE Vision Configuration Manager that come with the CVB software only provide limited access to the Basler camera's IP configuration settings. For example, the software will not find your camera if the camera's IP address range does not match the IP address range of the network adapter.

It could be useful for you to have full manual control over camera's IP address, subnet mask, usage of persistent/automatic IP addresses etc. In this case, we recommend that you download and install the latest version of Basler's pylon Runtime Package. You will find the package at this location on our website:


http://www.baslerweb.com/beitraege/beitrag_en_71708.html

The pylon runtime package can be installed side-by-side with the CVB software. The pylon package contains an IP configuration tool that lets you determine a Basler camera's current IP configuration and lets you set the configuration manually.

When you install the Basler pylon Runtime Package, you should select the **Custom** setup rather than a **Complete** setup in order to have the CVB and the pylon software installed side-by-side:

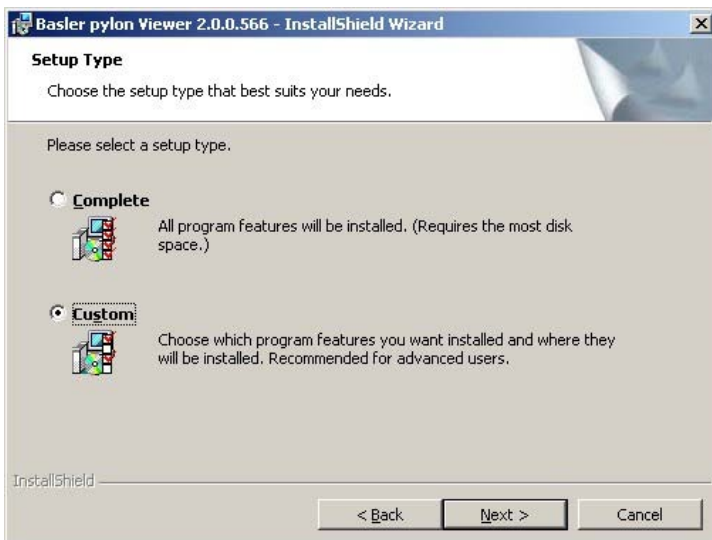


In the **Custom Setup** window's feature list, de-select the Pylon DirectShow Driver, the GEV Performance Driver, and the Pylon 1394 Drivers, as shown below:

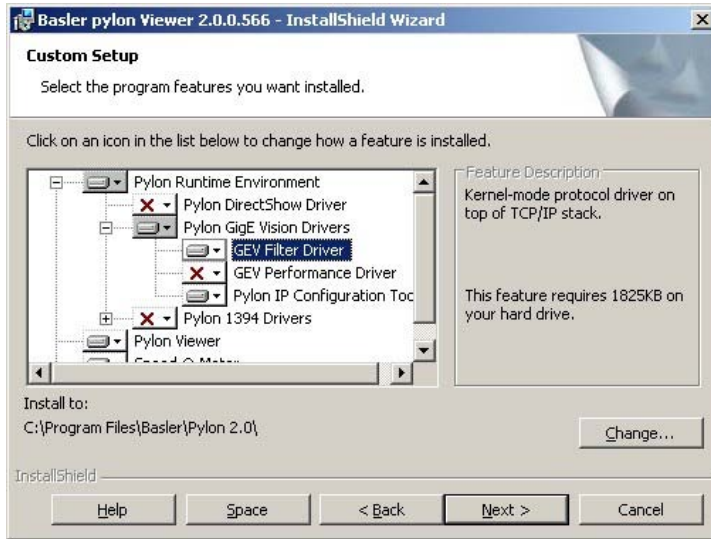


Once you have installed the Pylon software, you can use the Pylon IP Configuration Tool to configure the IP settings of your camera. The following images illustrate how to use the tool to change the camera's IP configuration from Auto IP addressing to a persistent (fixed) IP address.

Double click the **Pylon IP Configuration Tool** icon on your desktop to open the tool.

When the tool opens, select the camera you want to work with from the list on the left side of the tool and then click the **Change Configuration** button:

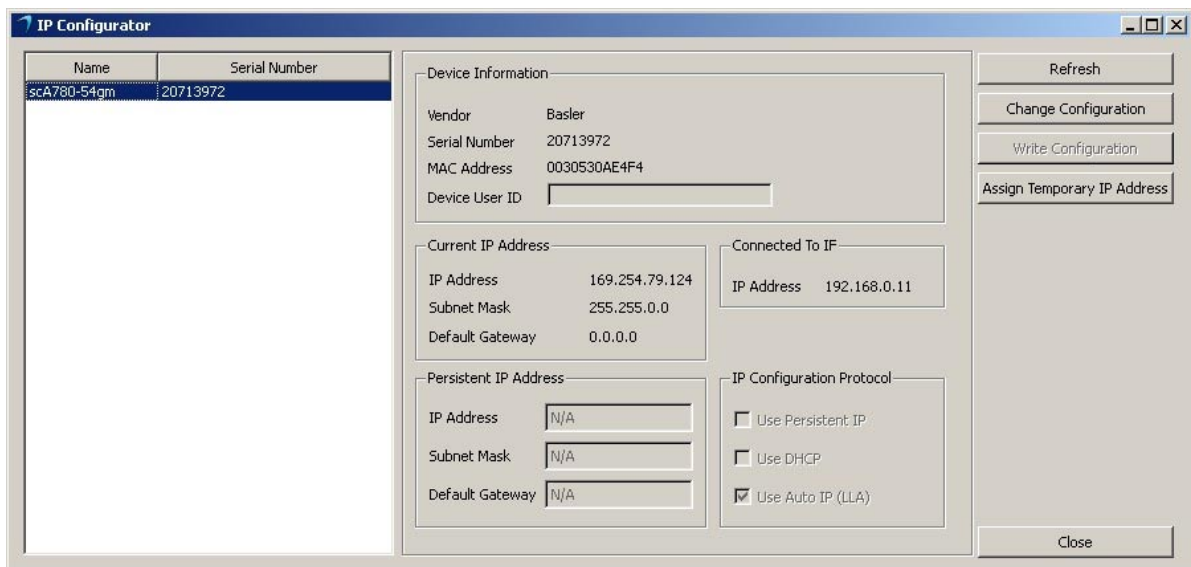


A dialog box may open asking you to enter an IP address to be temporarily assigned to the camera as shown below. The temporary IP address must be within the same IP address range and have the same subnet mask as the network adapter card to which the camera is connected.

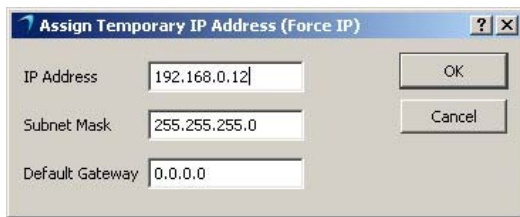

The dialog box titled "Assign Temporary IP Address (Force IP)" contains three input fields and two buttons. The "IP Address" field is set to "192.168.0.12", the "Subnet Mask" field is set to "255.255.255.0", and the "Default Gateway" field is set to "0.0.0.0". The "OK" and "Cancel" buttons are located to the right of the input fields.

Once a temporary IP address has been assigned to the camera, you can check the **Use Persistent IP** box as shown below. You can then change or enter values for the camera's persistent IP address and subnet mask.

After you have entered the IP settings, click the **Write Configuration** button to write the settings to the camera:

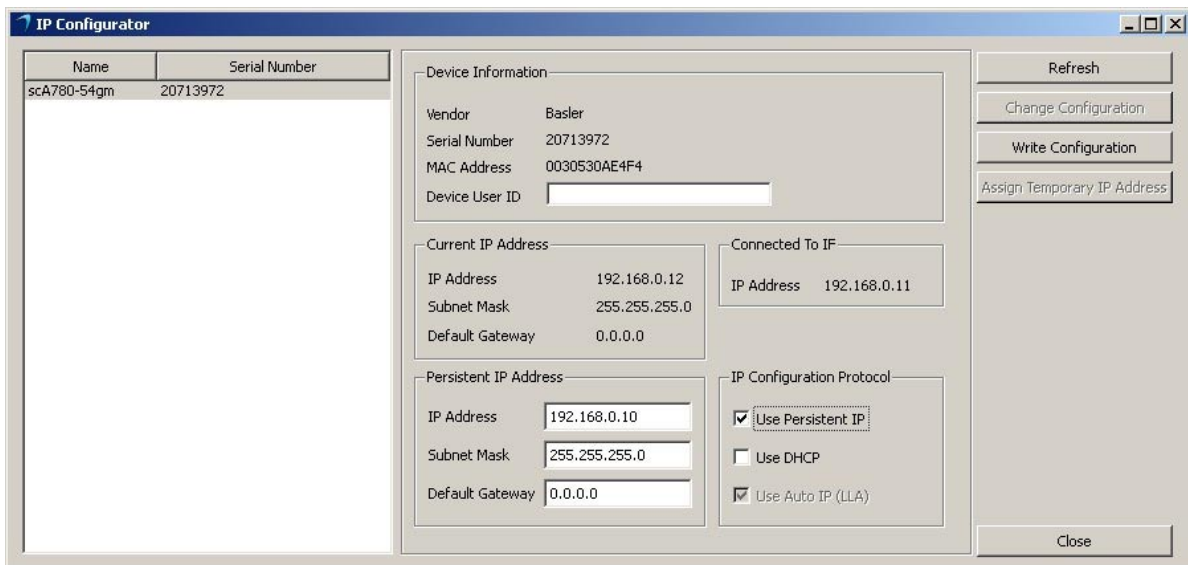

The "IP Configurator" window displays device information and IP settings. On the left, a table lists device details:

Name	Serial Number
scA780-54gm	20713972

The main area is divided into several sections:

- Device Information:** Vendor: Basler, Serial Number: 20713972, MAC Address: 0030530AE4F4, Device User ID: [empty field]
- Current IP Address:** IP Address: 192.168.0.12, Subnet Mask: 255.255.255.0, Default Gateway: 0.0.0.0
- Connected To IF:** IP Address: 192.168.0.11
- Persistent IP Address:** IP Address: 192.168.0.10, Subnet Mask: 255.255.255.0, Default Gateway: 0.0.0.0
- IP Configuration Protocol:** Use Persistent IP, Use DHCP, Use Auto IP (LLA)

On the right side, there are buttons for "Refresh", "Change Configuration", "Write Configuration", "Assign Temporary IP Address", and "Close".

Step 5: Firewall configuration

Any application using the GigE Vision network protocol must be able to accept data from the camera on several different UDP ports. On systems equipped with a firewall, you should disable the firewall for the network adapter to which your camera is connected.

If you are using the Windows Firewall on your system, you can disable the firewall on a specific network adapter by doing the following:


Click **Start**, click **Control Panel**, and double click **Windows Firewall**.

A **Windows Firewall** window will open as shown below. Click the **Advanced** tab.



A list of network adapter names will appear in the **Advanced** tab. Find the adapter to which your camera is connected and uncheck the box next to the adapter name.

For example, if your camera is connected to a network adapter named "Local Area Connection 2", you would uncheck the box next to this name as shown below.

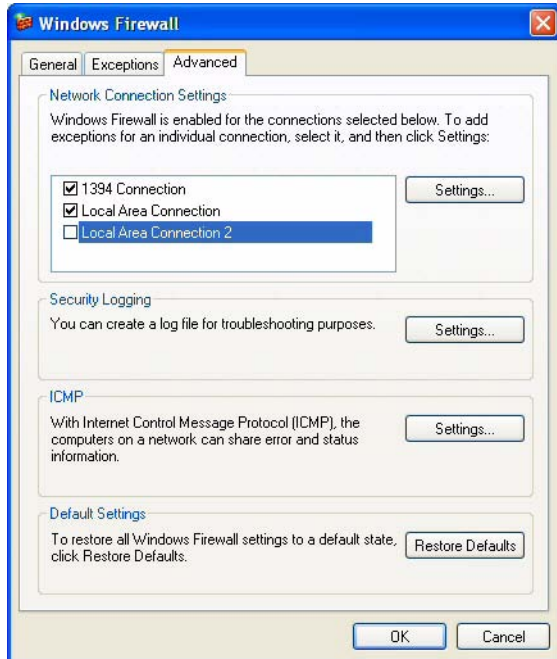


Click the **OK** button.


Step 6: Configuring the camera and grabbing images with CVB

An easy test for successful interfacing between CVB and a Basler GigE Vision camera can be performed using the CVB's GigE Vision Configuration Manager.


After starting the GigE Vision Configuration Manager, you will find your Basler camera listed in the **GenICam Device Tree**. Highlight the camera and then click the **->** button ("Add device from the device tree to the selected CVB devices"):

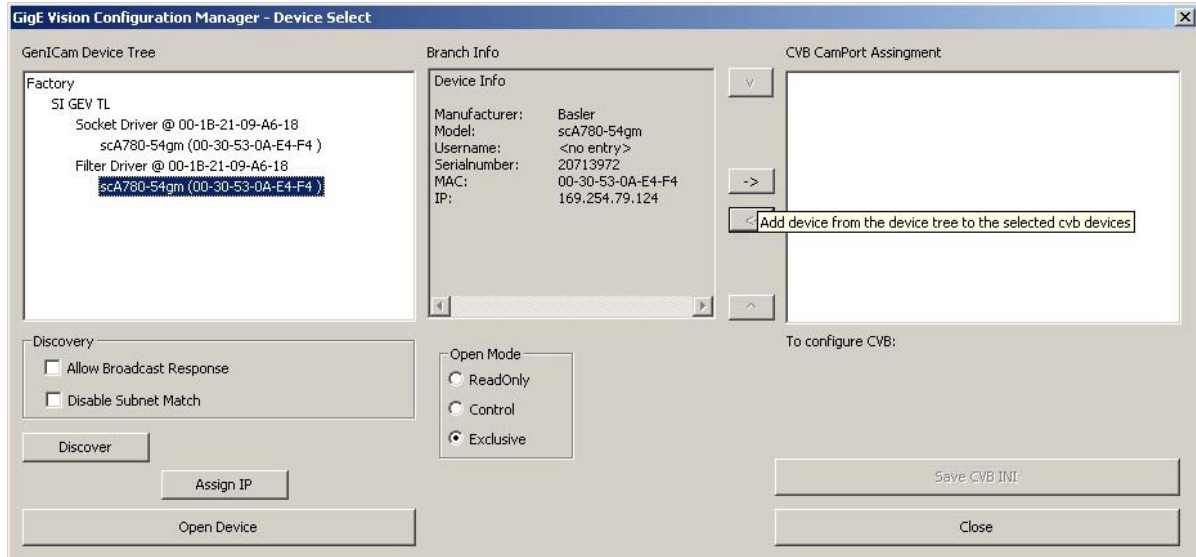

Once the camera has been added to the selected CVB devices list, click the **Save CVB INI** button:

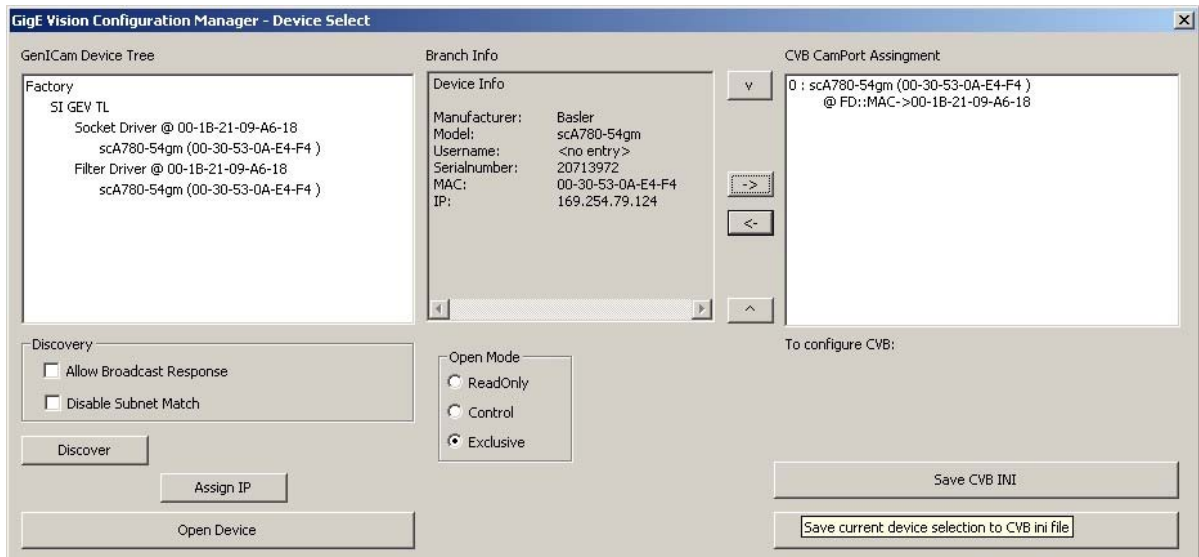

Your camera is now configured and ready for use with any CVB application, e.g., the GenICam Simple Demo. To run the GenICam Simple Demo, press the **Load Image** button, select the GenICam VIN (GenICam.vin is found in the CVB's "Drivers" folder) and configure the camera using the parameters in the camera features list (e.g., the **Exposure Time (Abs)** parameter) and/or start acquiring images by pressing the **Snap** button or checking the **Grab** check box:

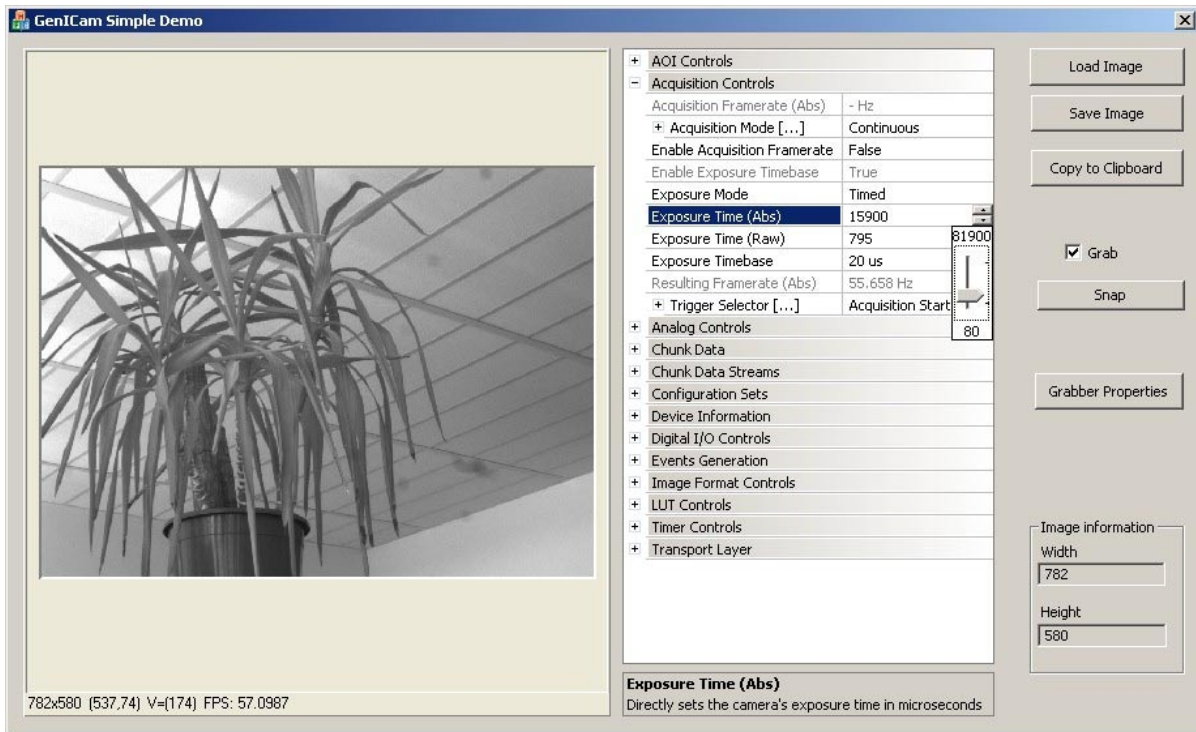

Revision History

Doc. ID Number	Date	Changes
AW00071501000	24 Jul 2008	Initial release of this document.
AW00071502000	30 Jul 2008	Updated contact addresses and phone numbers.
AW00071503000	15 Jan 2009	Updated the firewall configuration information starting on page 11 .

